
	GILES CHEMICAL ~ PREMIER MAGNESIA		
	Report		
	Title: Sampling Rationale	Number: E13-RT-100-002	
	Owner: Patrick Owen	Revision: 0	
	Effective Date: June 24, 2013	Page: 1 of 4	

- 1. Purpose:** To document the rationale of daily sampling at Giles Manufacturing.
- 2. Scope:** The calculation of the upper bound of defects if testing were performed daily and if zero defects were detected.

- 3. Calculation:** For zero defect sampling, the upper bound for a 95% confidence interval is defined as:

$$p = 3/n$$

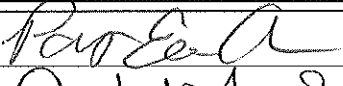
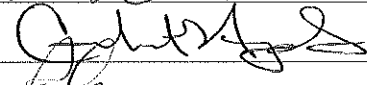


where p is the risk factor and n is the sample size. Giles' process is a continuous process and the batch changes yearly. If a sample is taken daily to affirm the USP results, then n= 365 for an entire year. In that case p would be $(3/365 =) 0.00822$, or 0.822%. In other words with 95% confidence it can be stated that the USP failure rate is 0.822% or less with daily testing. This is considered acceptable risk considering that Giles has never failed a USP test in its existence as a manufacturer.

There is a base assumption that the testing is correct and that there aren't any special causes of variation.

1. The results data in Table I include testing variability, and the variability is sufficient.
2. Assuming that all raw materials fed into the system meet specification the quality critical special causes are minimal.

- 4. Conclusion:** The calculated risk for zero defects at a 95% confidence interval was considered sufficient to do the testing Daily.

5. Review/Approvals

Printed Name and Title	Signature	Date
Patrick Owen - Process Engineer		6/24/2013
C. MATTHEW HAYNES - D.R. OPER		6/24/13
Paul Jones - MGR. ENG		6/24/13
Deborah Durbin - Dir. Quality		6/24/13

6. Attachments:

- a. Table I – USP data for 1/25/2008 – 6/21/2013

Controlled Document

**GILES CHEMICAL ~ PREMIER MAGNESIA****Report**

Title: Sampling Rationale

Number: E13-RT-100-002

Owner: Patrick Owen

Revision: 0

Effective Date: June 24, 2013

Page: 2 of 4

**Table I – USP Data**

Date	Lot	Assay (%) 99.00% - 100.50%	Chloride (ppm) <0.014% (140 ppm)	Iron(ppm) <20.00 ppm	LOI(%) 40.00% - 52.00%	pH 5.00 - 9.20
1/25/2008	0208	99.66	<10.00	0.20	51.25	6.80
2/22/2008	0308	99.65	<10.00	0.26	51.60	6.90
3/25/2008	0408	99.66	<10.00	0.29	51.20	6.48
4/25/2008	0508	99.65	<10.00	0.74	50.58	6.64
5/22/2008	0608	99.75	<10.00	0.35	49.41	7.06
6/25/2008	0708	99.67	<10.00	0.27	51.22	6.40
7/28/2008	0808	99.76	<10.00	0.27	51.16	7.11
8/27/2008	0908	99.63	<10.00	0.20	49.08	6.80
9/25/2008	1008	99.65	<10.00	0.18	50.10	7.02
10/30/2008	1108	99.61	<10.00	0.20	51.05	6.85
11/20/2008	1208	99.64	<10.00	0.18	51.26	6.88
12/11/2008	1308	99.62	<10.00	0.22	51.33	6.77
1/7/2009	0109	99.61	<10.00	0.07	48.28	6.73
1/27/2009	0209	99.71	<10.00	0.01	51.38	6.44
2/12/2009	0309	99.75	<10.00	0.01	51.49	6.94
3/5/2009	0409	99.68	<10.00	0.01	51.14	6.29
3/27/2009	0509	99.66	<10.00	0.01	51.26	6.13
4/21/2009	0609	99.83	<10.00	0.14	51.46	6.17
5/7/2009	0709	99.62	<10.00	0.16	51.16	6.20
6/4/2009	0809	99.63	<10.00	0.08	51.29	6.12
6/25/2009	0909	99.74	11.00	0.09	51.24	6.62
7/23/2009	1009	99.69	<10.00	0.09	48.79	6.70
8/20/2009	1109	99.64	<10.00	<0.05	51.03	6.45
9/14/2009	1209	99.84	20.00	<0.07	51.17	6.50
10/21/2009	1309	99.64	30.00	<0.05	51.13	5.59
11/13/2009	1409	99.50	10.00	<0.05	51.13	6.57
12/7/2009	1509	99.47	20.00	<0.05	51.24	6.23
1/11/2010	0110	99.71	<10.00	0.11	51.10	7.40
2/8/2010	0210	99.77	<10.00	0.09	51.18	6.60
3/15/2010	0310	99.67	<10.00	0.09	51.20	6.34
4/21/2010	0410	99.68	<10.00	0.21	51.07	6.86
5/19/2010	0510	99.75	20.00	0.52	51.31	6.50
6/21/2010	0610	99.73	<10.00	0.18	51.10	6.29
7/14/2010	0710	99.85	<10.00	0.14	51.20	6.47

Controlled Document

Only those quality documents viewed through the Giles Chemical electronic Documentation System are officially controlled. All other copies, whether viewed through another computer program or a printed version, are not controlled and, therefore, the Quality Unit at Giles assumes no responsibility for accuracy of the document.



GILES CHEMICAL ~ PREMIER MAGNESIA

Report

Title: Sampling Rationale

Number: E13-RT-100-002

Owner: Patrick Owen

Revision: 0

Effective Date: June 24, 2013

Page: 3 of 4



8/12/2010	0810	99.65	<10.00	0.06	51.38	6.32
9/3/2010	0910	99.67	<20.00	0.10	51.32	6.39
10/13/2010	1010	99.54	<20.00	0.08	51.73	6.65
11/3/2010	1110	99.49	20.00	0.11	51.26	6.05
12/8/2010	1210	99.56	20.00	0.16	51.58	6.65
1/13/2011	0111	99.46	20.00	<0.05	51.94	6.67
2/8/2011	0211	99.37	10.00	0.11	51.25	6.20
3/3/2011	0311	99.40	20.00	0.12	51.40	7.17
3/23/2011	0411	99.53	20.00	0.13	51.41	6.71
4/19/2011	0511	99.26	20.00	0.15	51.48	6.24
5/18/2011	0611	99.29	16.00	0.32	51.87	6.52
6/29/2011	0711	99.46	17.00	0.09	51.02	6.80
8/8/2011	0811	99.39	6.00	0.08	51.06	6.36
9/14/2011	0911	99.34	14.00	0.17	50.95	7.82
10/14/2011	1011	99.36	8.00	0.07	50.95	6.38
11/21/2011	1111	99.21	8.00	<0.05	50.70	6.52
1/5/2012	0112	99.42	6.00	0.08	50.80	6.20
3/16/2012	0212	99.49	8.00	0.10	50.83	6.88
5/4/2012	0312	99.61	8.00	0.11	50.82	6.58
4/16/2012	0412	100.40	Pass	Pass	51.12	6.67
4/27/2012	0512	99.49	Pass	Pass	50.66	7.29
5/14/2012	0612	99.90	Pass	Pass	50.63	7.51
5/25/2012	0712	99.87	Pass	Pass	50.36	6.37
6/11/2012	0812	99.42	Pass	Pass	50.46	6.71
6/25/2012	0912	99.42	Pass	Pass	50.59	7.90
7/9/2012	1012	99.06	Pass	Pass	49.37	8.05
7/23/2012	1112	100.36	Pass	Pass	50.57	8.20
8/7/2012	1212	99.01	Pass	Pass	50.76	8.21
8/20/2012	1312	99.51	Pass	Pass	50.82	8.41
9/3/2012	1412	99.42	Pass	Pass	51.04	7.71
9/17/2012	1512	99.78	Pass	Pass	51.00	7.82
10/3/2012	1612	99.18	Pass	Pass	49.14	7.09
10/15/2012	1712	100.21	Pass	Pass	50.35	6.74
10/29/2012	1812	100.14	Pass	Pass	51.08	6.83
11/12/2012	1912	99.42	Pass	Pass	51.36	7.40
11/26/2012	2012	99.13	Pass	Pass	50.78	6.38
12/10/2012	2112	99.54	Pass	Pass	51.67	6.61
12/21/2012	2212	99.54	Pass	Pass	44.58	5.83
1/7/2013	0113	100.04	Pass	Pass	50.81	7.34
1/22/2013	0213	99.18	Pass	Pass	51.00	7.12

Controlled Document

Only those quality documents viewed through the Giles Chemical electronic Documentation System are officially controlled. All other copies, whether viewed through another computer program or a printed version, are not controlled and, therefore, the Quality Unit at Giles assumes no responsibility for accuracy of the document.

**GILES CHEMICAL ~ PREMIER MAGNESIA****Report**

Title: Sampling Rationale

Number: E13-RT-100-002

Owner: Patrick Owen

Revision: 0

Effective Date: June 24, 2013

Page: 4 of 4



2/5/2013	0313	99.80	Pass	Pass	50.57	7.23
2/20/2013	0413	99.30	Pass	Pass	50.13	6.69
3/8/2013	0513	99.42	Pass	Pass	50.73	7.46
3/21/2013	0613	99.59	Pass	Pass	51.28	6.85
4/3/2013	0713	99.80	Pass	Pass	50.75	6.70
4/18/2013	0813	99.10	Pass	Pass	50.70	6.81
5/1/2013	0913	100.38	Pass	Pass	51.04	6.20
5/16/2013	1013	99.18	Pass	Pass	50.91	6.71
5/30/2013	1113	99.08	Pass	Pass	50.85	6.61
6/13/2013	1213	100.50	Pass	Pass	51.10	7.82
6/21/2013	1313	100.14	Pass	Pass	50.90	7.57

AVG	99.61	15.09	0.16	50.84	6.80
LOW	99.01	6.00	0.01	44.58	5.59
HIGH	100.50	30.00	0.74	51.94	8.41

Controlled Document

Only those quality documents viewed through the Giles Chemical electronic Documentation System are officially controlled. All other copies, whether viewed through another computer program or a printed version, are not controlled and, therefore, the Quality Unit at Giles assumes no responsibility for accuracy of the document.